

Playing Cards

Wood Box Kit
14+ Age Group


Small Parts

CHOKING HAZARD

This kit and resulting product are not suitable for small children under 6 years


Sharp parts

Step 1

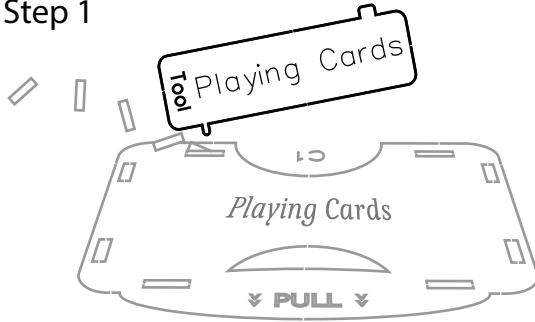


Punch out the tool,
...the tool is your freind.

Step 2

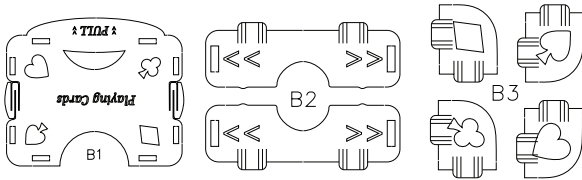


Punch out B1, both
B2s, and all four B 3s.

Step 4

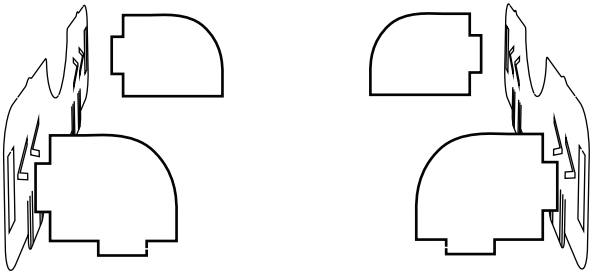


First assemble the sides.
Push B3 into B2 for both side panels.

Step 3

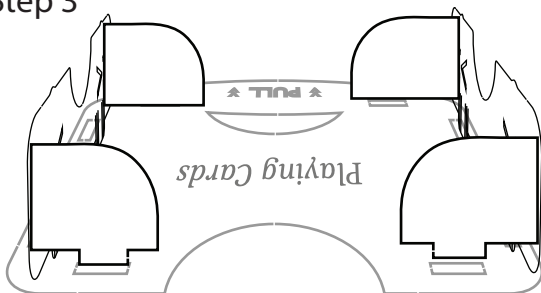


Press both side panels down into B1. Flip over
and press hard to fully seat the side panels.

Step 5

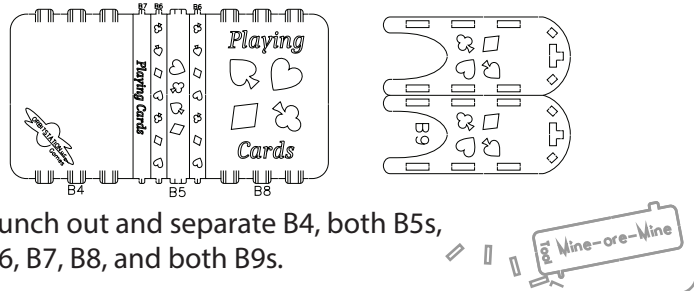


Punch out and separate B4, both B5s,
B6, B7, B8, and both B9s.

Step 6

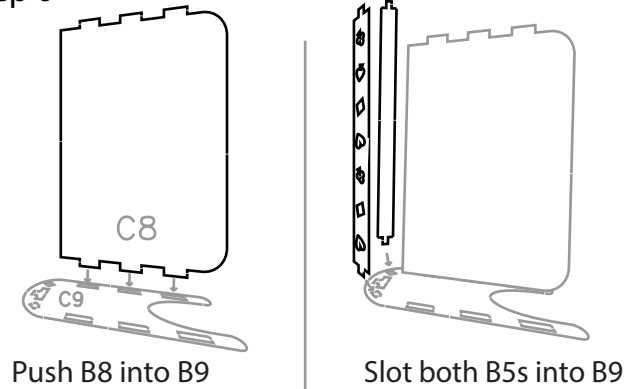

Push B8 into B9


Slot both B5s into B9

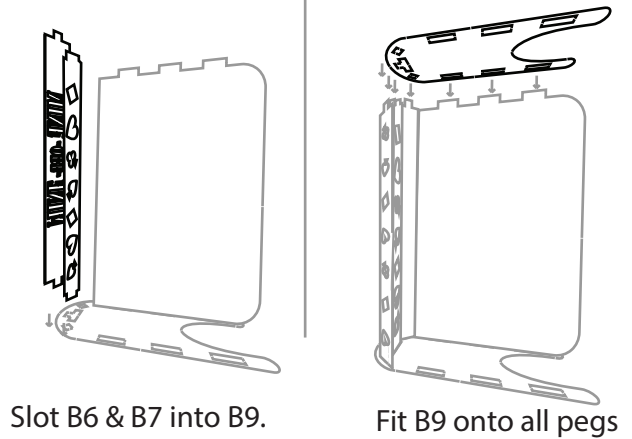

Slot B6 & B7 into B9.

Fit B9 onto all pegs

Step 7

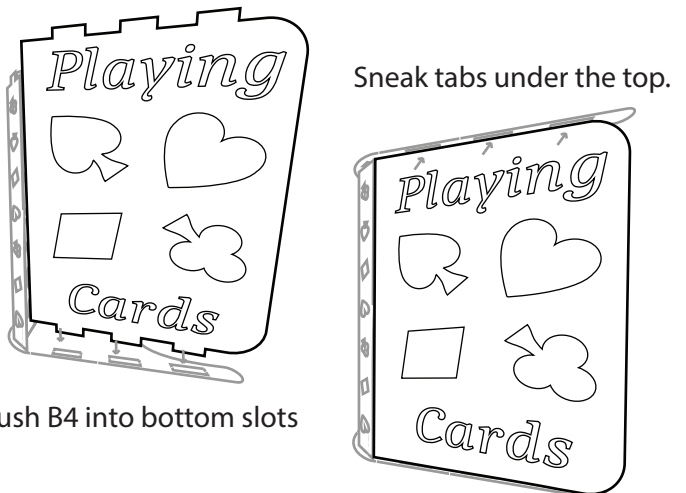

Push B4 into bottom slots

Sneak tabs under the top.

Did you break a part?

No Worries. We are here to help. Just visit our website, we will be happy to provide you with any replacement parts needed.

Tips & Tricks:

- * If the tray is a tight fit, sand the top bumps on the tray rails. Just a few passes at a time, and try the fit after every few passes of the sand paper.
- * Gluing is optional, but if you do, only put tiny amounts in the corners, stay away from the moving parts.
- * If there are switches, and they feel loose, the the box is not tight enough. Place the tray face up on a flat surface, and use the flat side of the tool to press down on the each of the four corners. A hammer may be used with the tool laid flat on top, as to cushion the blow.
- * If the tray squeaks when sliding, try putting some wax on the bottom and edges that slide.



**Visit OrbitStation.com
for more great kits and games.**